
# H1-E Wiring Diagram (US Model)

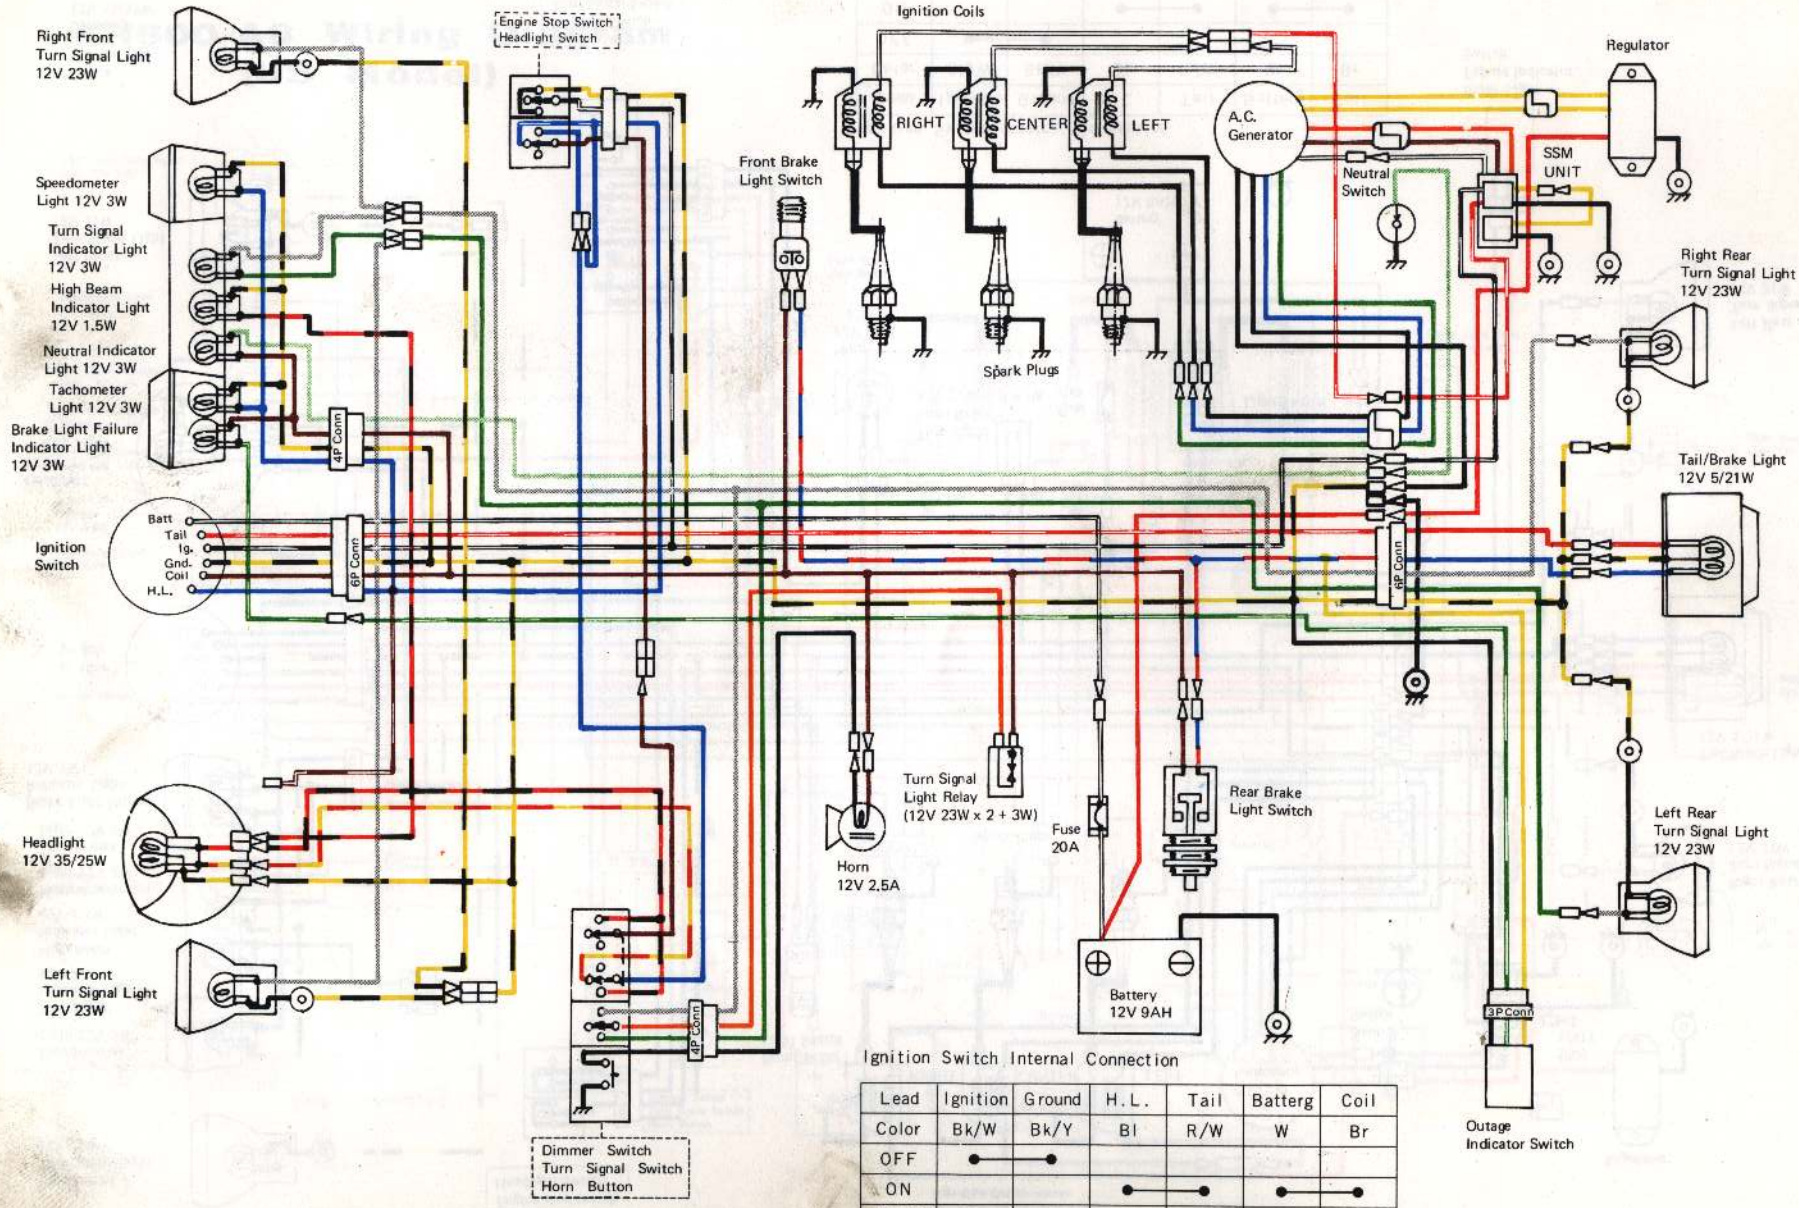



Ignition Switch Internal Connection

| Lead | Ignition | Ground | H.L. | Tail | Batterg | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Bl | R/W | W | Br |
| OFF | ● | ● | | | | |
| ON | | | ● | ● | ● | ● |
| PARK | ● | ● | | ● | ● | |

(136-3)

# H1 E Wiring Diagram (European Model)

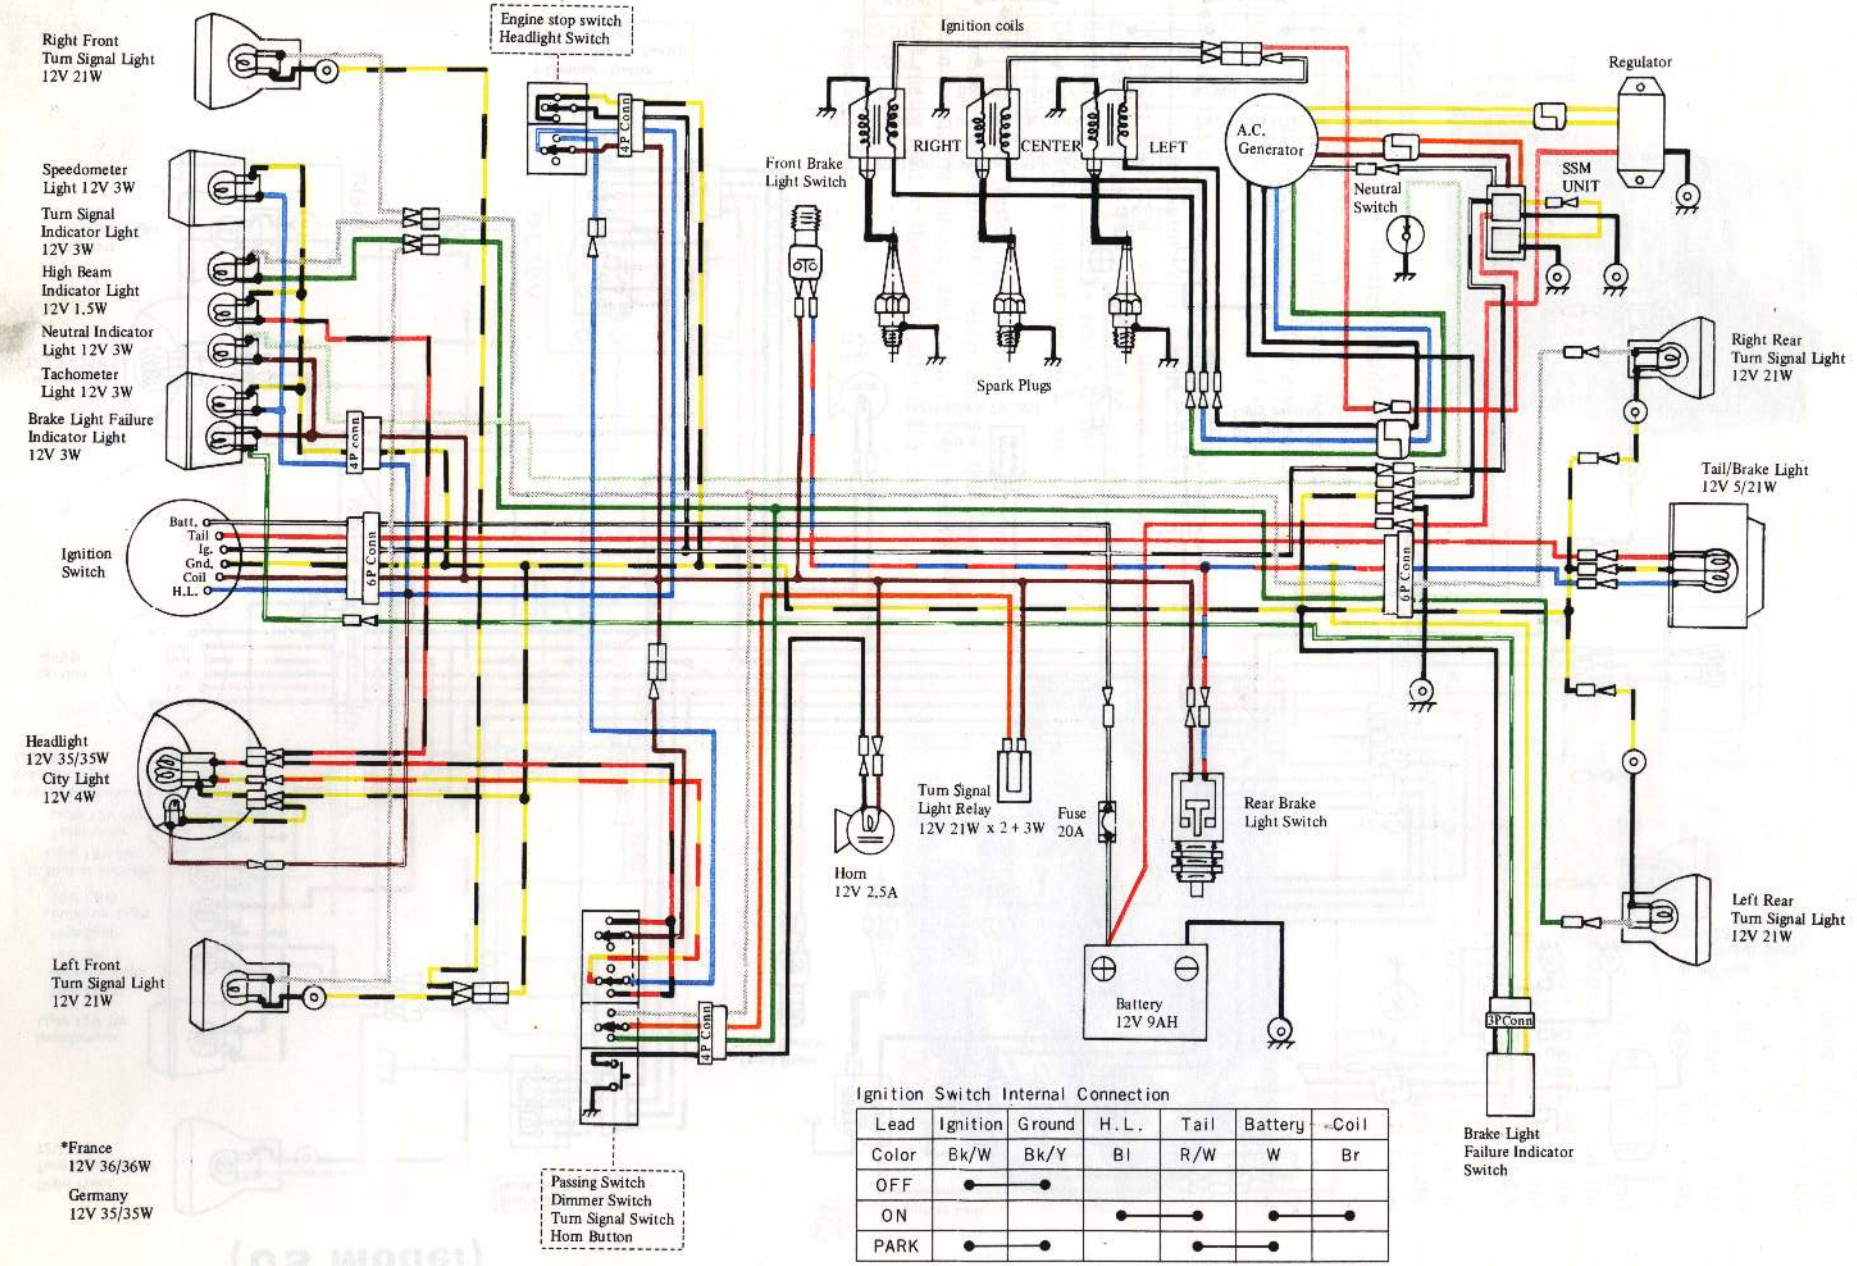



Ignition Switch Internal Connection

| Lead | Ignition | Ground | H.L. | Tail | Battery | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Bl | R/W | W | Br |
| OFF | ● | ● | | | | |
| ON | | | ● | ● | ● | |
| PARK | ● | ● | | ● | ● | |

(138-2)

# KH500-A8 Wiring Diagram (US Model)

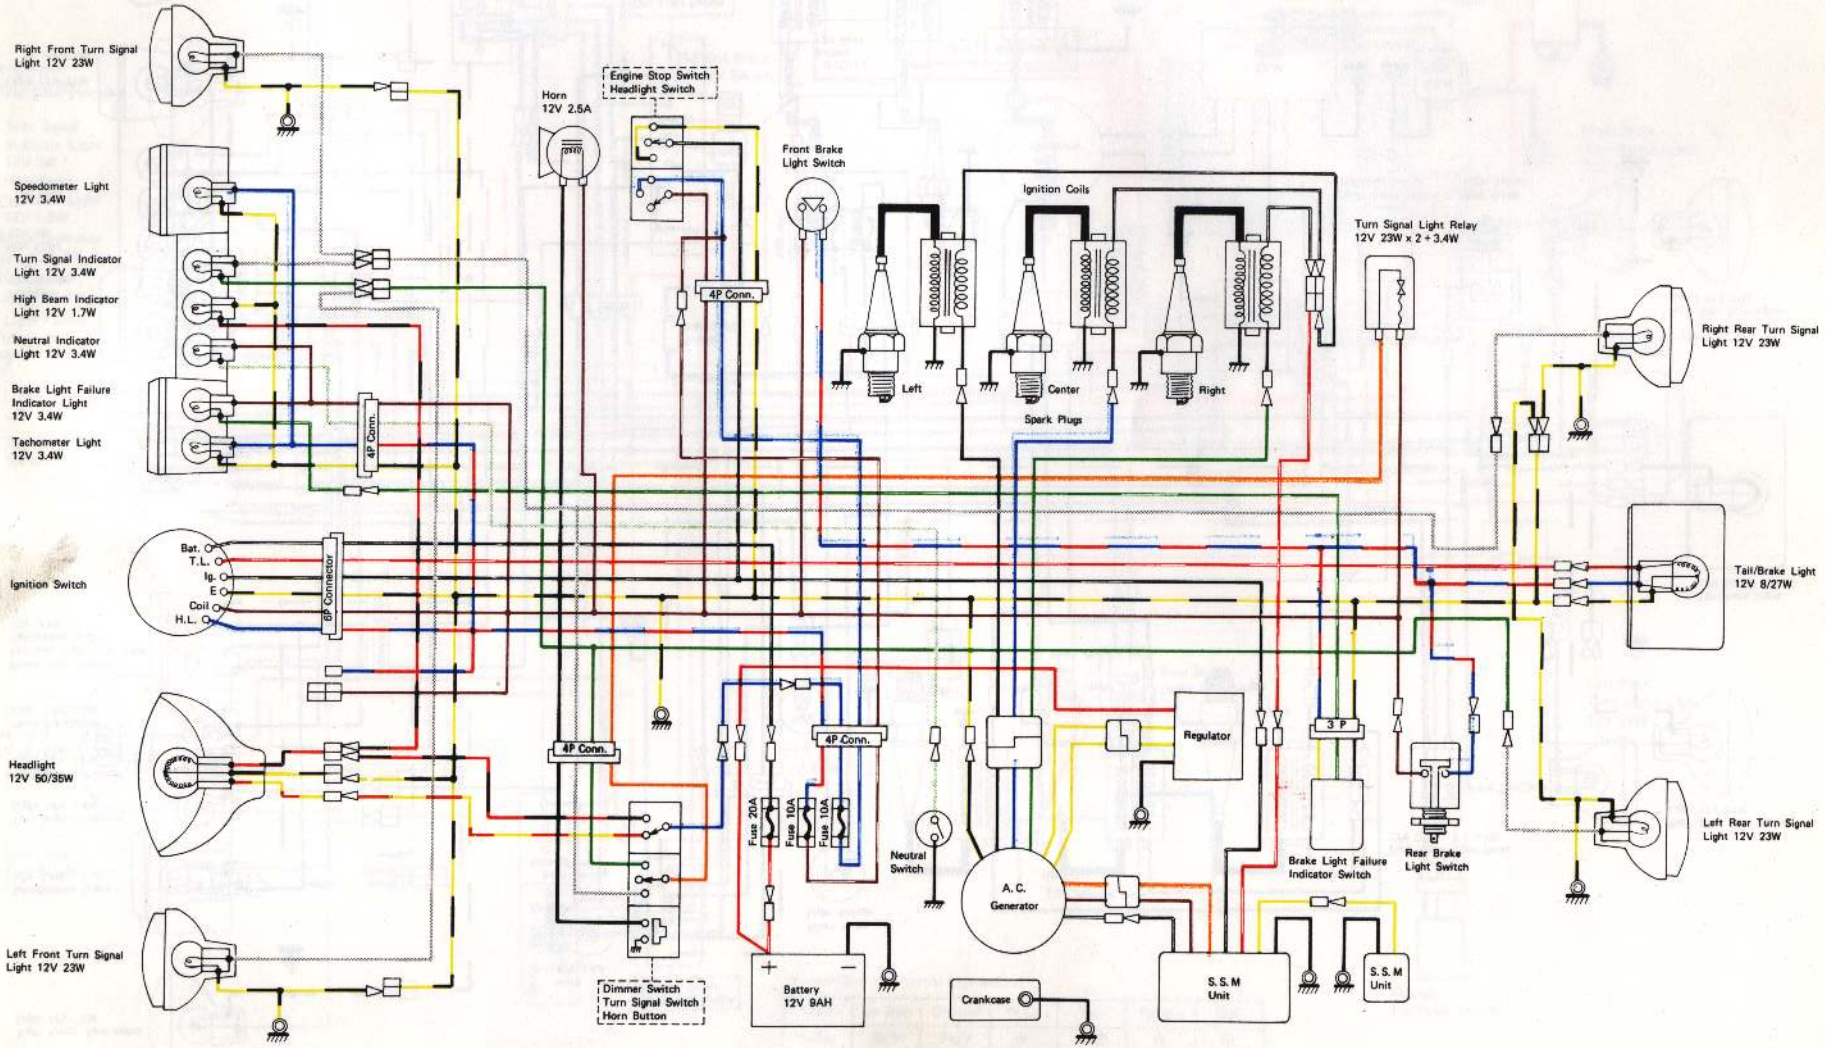



Ignition Switch Connections

| Lead | Ignition | E | H.L. | Tail | Battely | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Blue | R/W | White | Brown |
| OFF | ● | ● | | | | |
| ON | | | ● | ● | ● | ● |
| PARK | ● | ● | | ● | ● | |

(191-3)

# KH500-A8 Wiring Diagram (European Model)

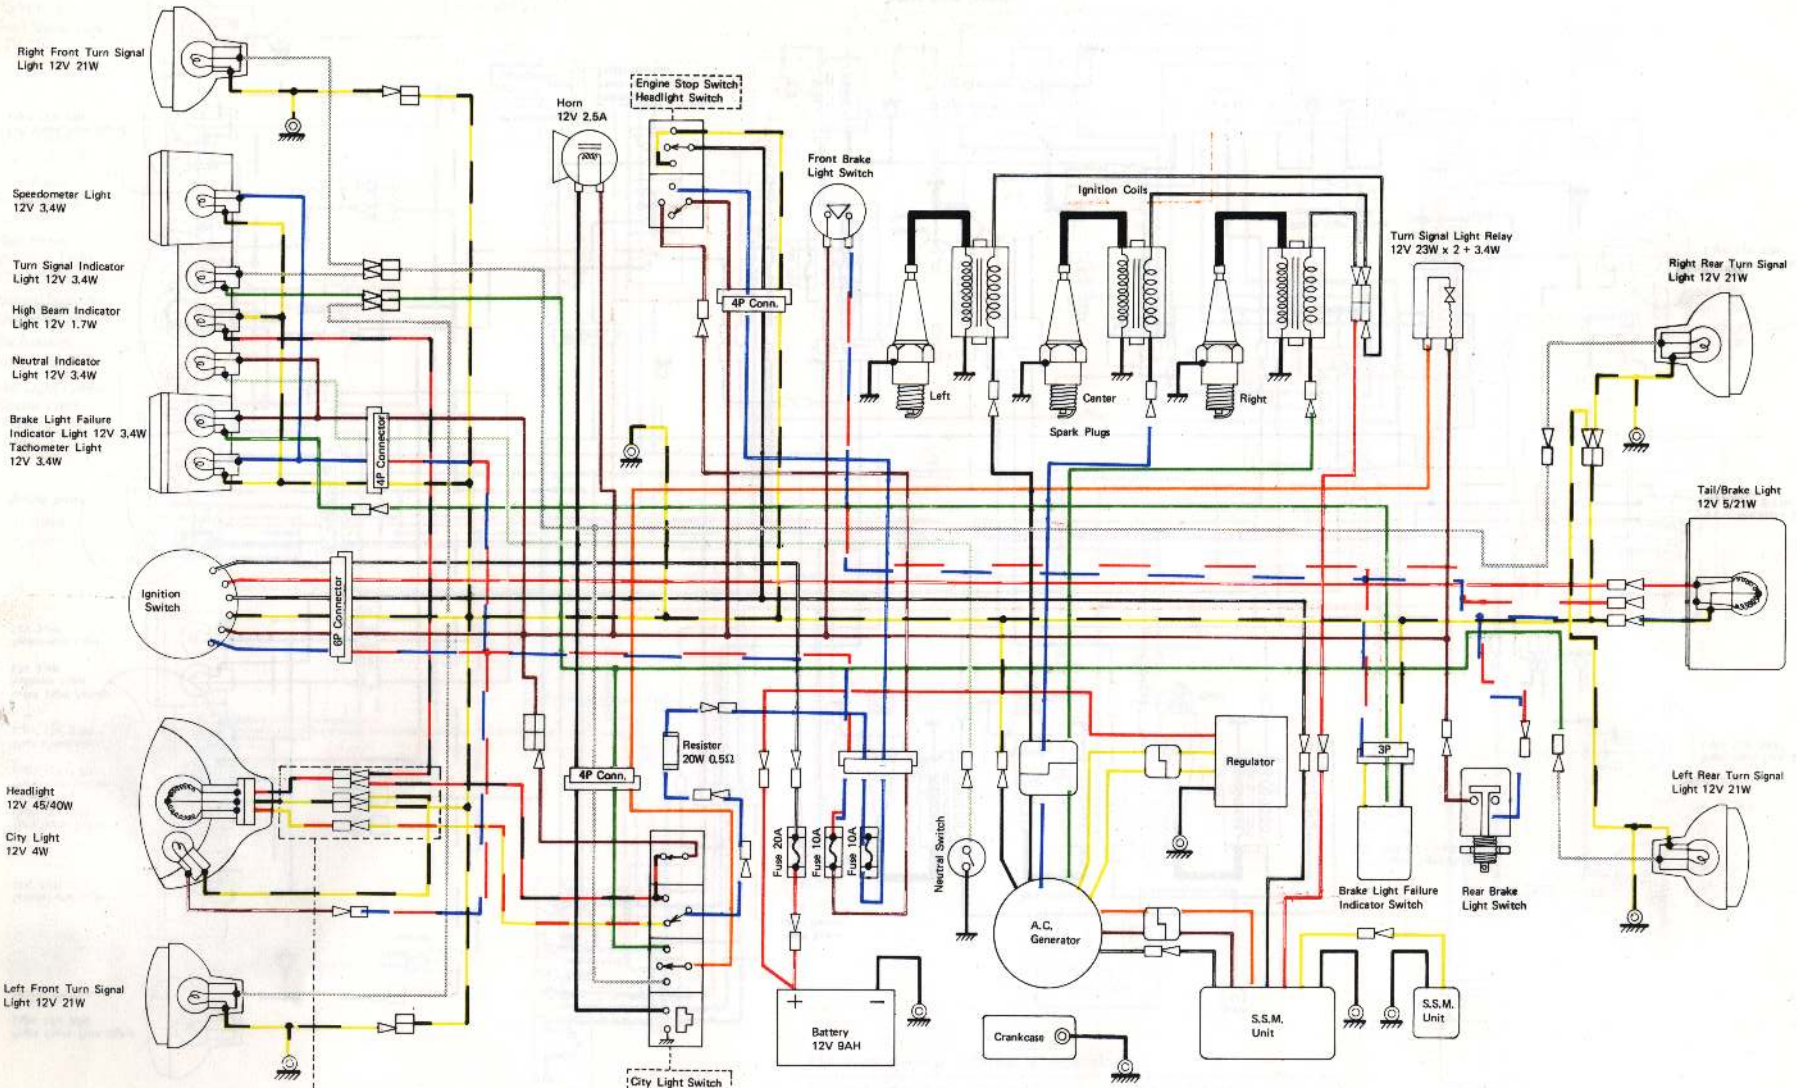



Ignition Switch Connections

| Lead | Ignition | E | H.L. | Tail | Battery | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Blue | R/W | White | Brown |
| OFF | ● | ● | | | | |
| ON | | | ● | | ● | ● |
| PARK | ● | ● | | ● | ● | |

(209-1)

# H2-B Wiring Diagram (US Model)

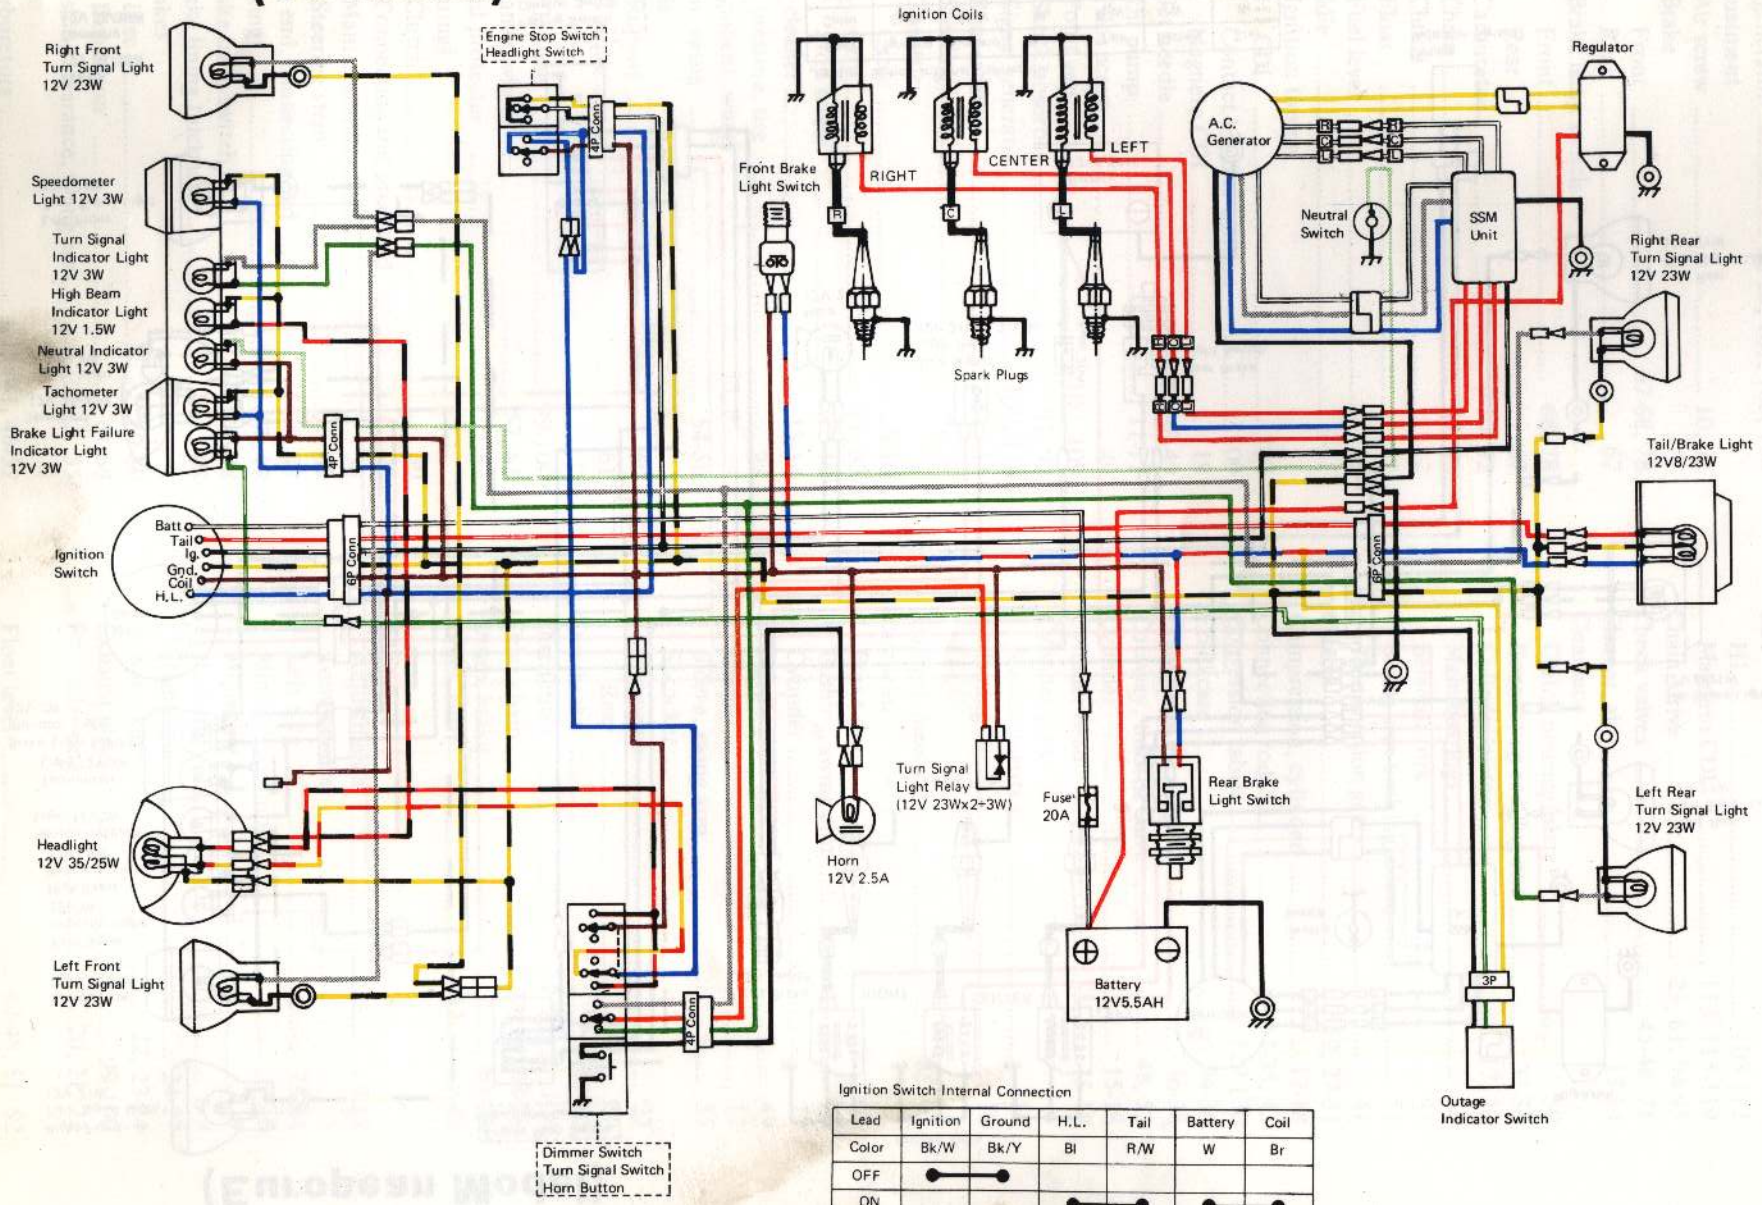



Ignition Switch Internal Connection

| Lead | Ignition | Ground | H.L. | Tail | Battery | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Bl | R/W | W | Br |
| OFF | ● | ● | | | | |
| ON | | | ● | ● | ● | ● |
| PARK | ● | ● | | ● | ● | |

(147–2)

# H2-B Wiring Diagram (European Model)

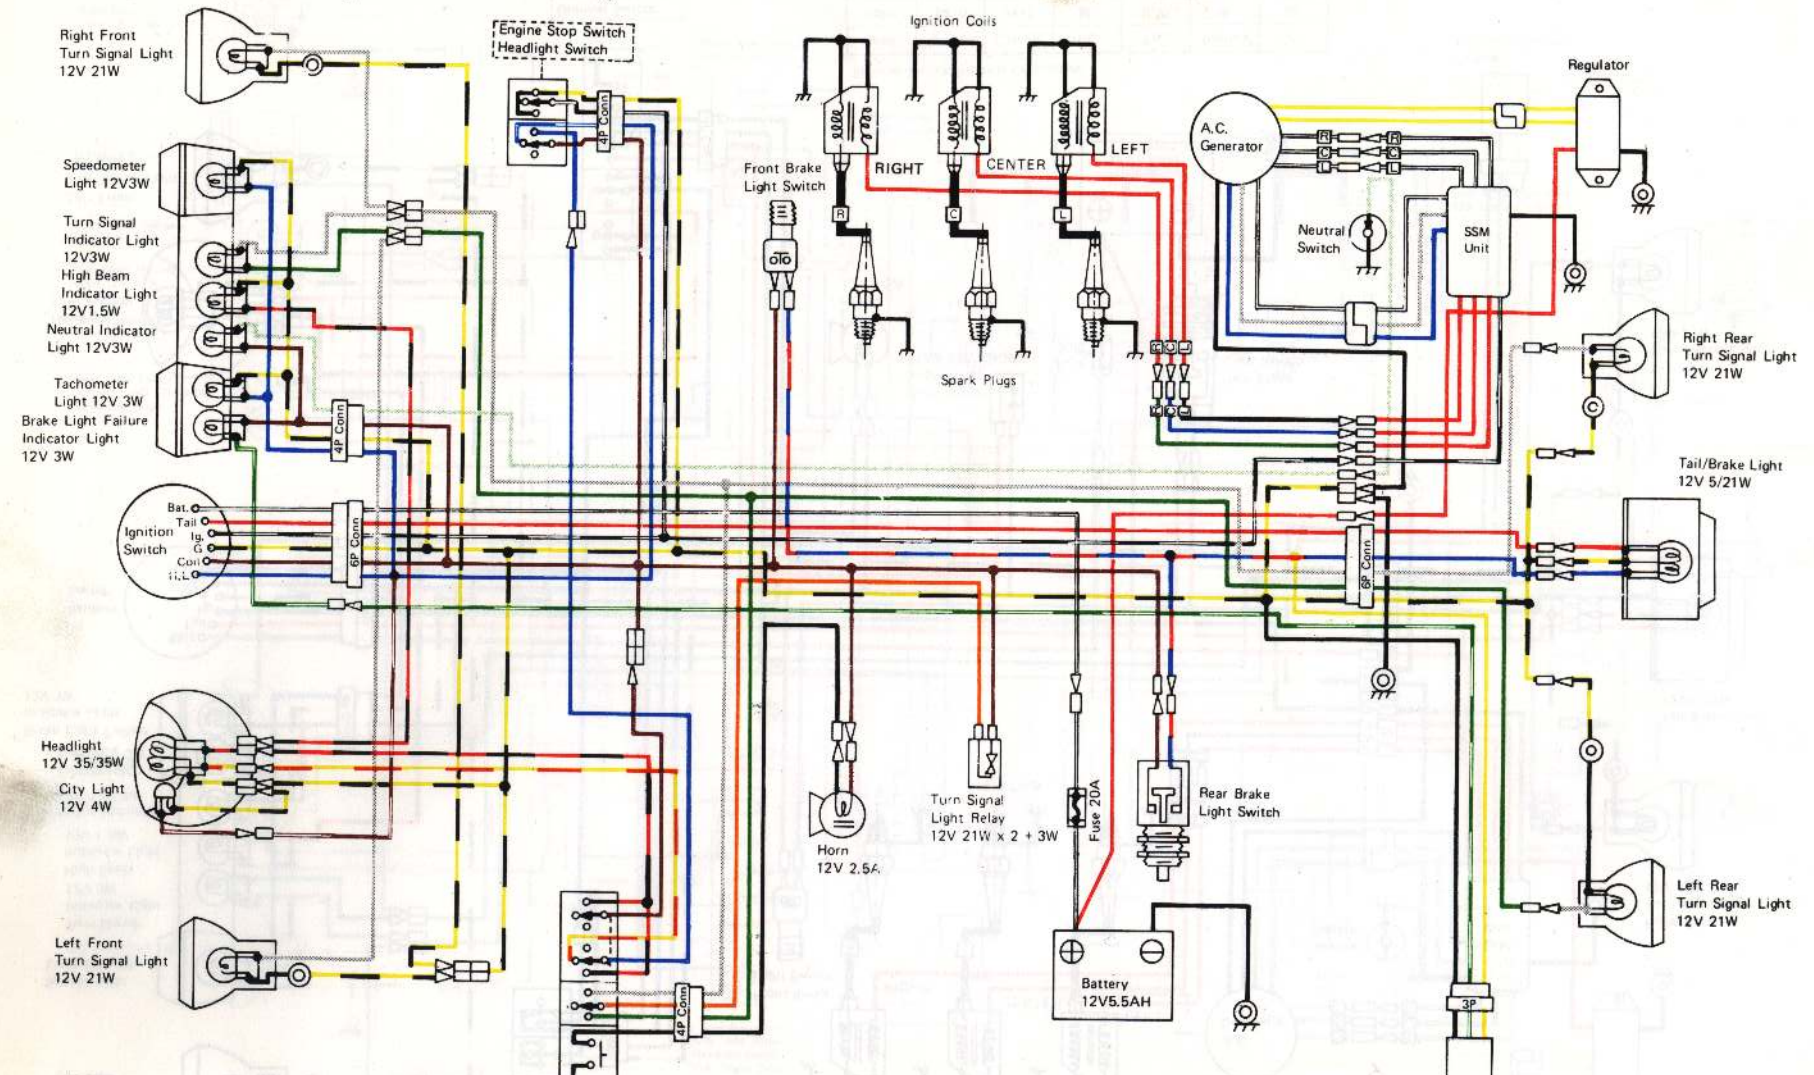


*France
12V 36/36W
Germany
12V 35/35W

Ignition Switch Internal Connection

| Lead | Ignition | Ground | H.L | Tail | Battery | Coil |
|---|---|---|---|---|---|---|
| Color | Bk/W | Bk/Y | Bl | R/W | W | Br |
| OFF | ● | ● | | | | |
| ON | | | ● | ● | ● | |
| PARK | ● | ● | | ● | | |

(156-1)